


NexGen Portable Staging

USER GUIDE

www.portablestage.co.uk

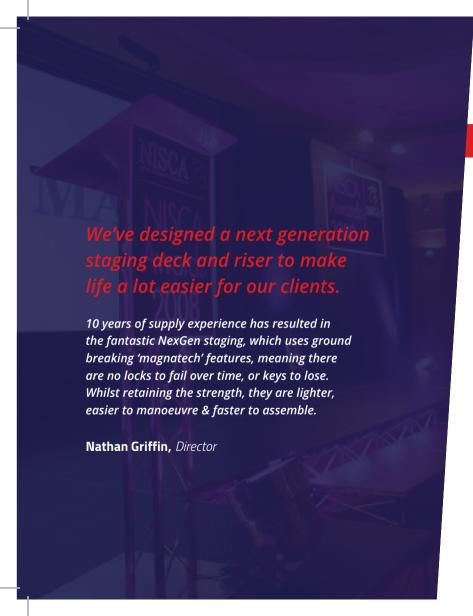


Content

Planning Grid	2
Assembly	4
Opening the Riser Legs	2
Placing the deck platforms on the risers	4
Placing the brace plate connectors	4
Fitting the Fascia Hardboards	4
Attaching a step or lower level platform module	
Using a Disabled access wheelchair ramp	
Handrail & Clamp Assembly	-
Adding Chair stop & Uneven Floor Wedges	
Takedown the deck platforms	6
Taking down all other items.	7
Storage	,
Parts	8
Tips	10
Enter our Photo Competition	11

Planning Grid

Use this useful planning grid on the side to set-out your configurations.

= 1m x 1m decks

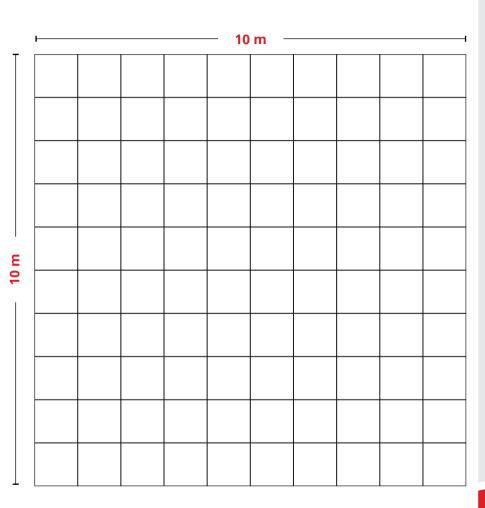

Assembly



Opening the Riser Legs


Open the riser legs out whilst touching the floor, to avoid stressing the poles and rods. Slowly open and tap down on the floor. Do not open out in the air.



Placing the deck platforms on the risers

Place the deck platforms onto the location pillars, so that all 4 pillars are seated into the deck holes. The magnetic force will attract the decks together, tap the decks into place where required.





Placing the brace plate connectors

Place the brace plates on each of the connection point. Place over the location pillars around the perimeter joins and internal joins.



Fitting the Fascia Hardboards

Place the fascia boards into position, start with the corner sections, so you can align the corner properly and slide the stainless trim into position. Then move onto the other fascia sections. Secure each with 3 fasteners per 1m. Slightly undo the fastener screw so the fasteners slot into the deck side through the holes, then tap the screw into the fascia until loosely fixed. Align the fascia board until neatly positioned and then tap the screw fully into the deck until flush. (Simply unscrew to remove, a small power tool speeds things up.)





Attaching a step or lower level platform module

Adding a step at a lower level, or a lower tier section requires fixing the legs of the risers together. Use the straps provided to Velcro around the silver riser leg poles. This will secure the step to the higher stage.





Using a Disabled access wheelchair ramp

The ramp we have chosen to use with our staging is great for wheelchair users. Its very fast to assemble and sits without any need for fixings. Simply assemble the ramp and place on the floor and the lip of the staging. The grip underside stops movement in use. (You may need multiple ramps to achieve the incline requirements of your wheelchair users)





Handrail & Clamp Assembly

Each handrail requires 2 clamps. Undo the large brass circle screw past the half way point in the clamp, then twist the clamp under the deck missing the riser poles. Place the clamp on top towards the end of the platform. Undo the black tube screw, so the base tubes of the handrail can be fully slipped into the clamp tubes. Then tighten the screws, both under the deck and to fix the handrail in the tube. Repeat for all rails, including the dual corner areas.






Adding Chair stop & Uneven Floor Wedges


Add in the same manner as the fascia hardboards. The chair stop boards stand proud of the stage. Adding uneven floor wedges under the riser legs, black block feet can stop unwanted bounce on slightly uneven floors.

Takedown the deck platforms

! IMPORTANT

When removing the deck platforms from the riser legs, they must be lifted vertically. Lifting at an angle will stress and snap the location pillars on the riser, as they are still magnetically attracted to the deck. At one side of the deck in the middle, lift the deck and hold down the riser legs to break the magnetic force, and offset the deck platform. Then repeat the process at the other end of the deck and then lift the deck vertically clear. Two people can do this easier.

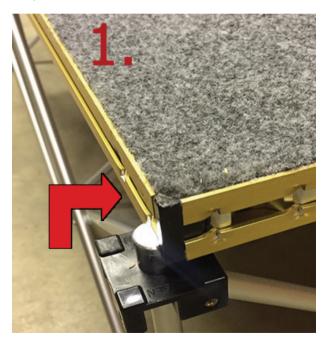

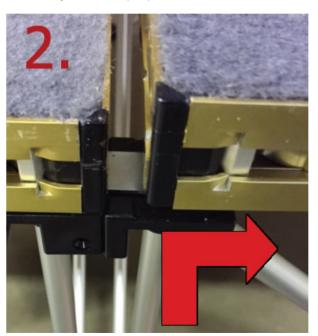

Taking down all other items.

Simply reverse the assembly instructions for take down of the Handrails, Fascia, Steps and Ramps.

Storage

The important point to note is that the riser legs are fragile when they are being taken down and left in their storage position. Do not lift the decks off the risers at an angle. Placing the risers on a trolley or in a flight case will keep them safe whilst in storage.





SUBSCRIBE

Video Guide

You can also visit our youtube channel for more in-depth video tutorial about setting up and taking down the staging.







https://www.youtube.com/channel/UCHeQ91I5-S7ZsIwEAJWZE8w

Parts

Identify the parts below, so you can replace where required to keep your staging in tip top condition. Available online to order.









Guide Rods for risers

Vertical Raiser Poles



Guide tube



Scissor Sections





Brace Connectors





Hardboard Fascia Fasteners









Uneven Floor Wedges



Black Blocks

Handrail Clamps



Folding Trolley



Velcro Step/Tier straps






Blackdrop 6m x 3m



Corner Trims

Tips

- ✓ Store Risers Safely so they cannot be bent or broken whilst in storage.
- ✓ Always lift decks vertically so location pillars are not sheared from the risers
- ✓ Don't store staging in extremes Radiators & Cold Stores will shorten the lifespan of your staging.
- ✓ Housekeep the risers tighten screws and straighten guide tubes occasionally.
- ✓ Store your handrails on the wall Fit 2 brackets to a wall and hang the handrails from them to save space.
- ✓ Rain & Water warps wood If left out in the rain the deck platforms will warp.
- ✓ Use a Flight Case Store items on a trolley of if your budget allows in a Flight Case.
- ✓ Parts keep your staging useable Order inexpensive parts for legs on the www.portablestage.co.uk website.

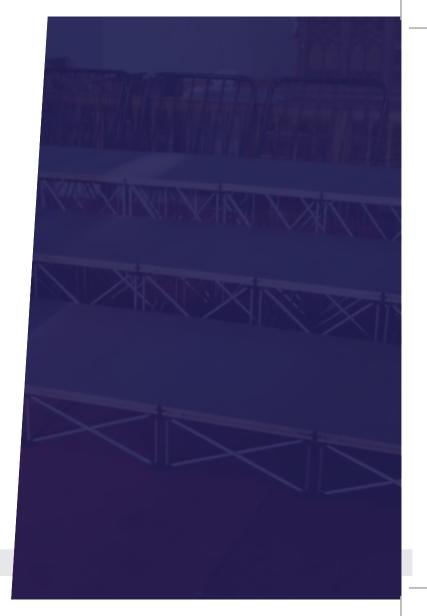

Enter our Photo Competition

Send us your Event photos, showing the Staging in use for your chance to win great prizes



Tell us about your experience

Thank you for your purchase, Hope you are enjoying our product!

Give us 30 seconds of your time to tell us how you liked our product. Your feedback is very important to us. Please use the following email address to leave us a review.

enquiries@portablestage.co.uk



Send the images to



0845 2260 192 www.portablestage.co.uk





Portable Stage

Portable Stage, Aizelwoods Mill, Nursery Street, Sheffield S3 8GG

- **** 0845 2260 192
- enquiries@portablestage.co.uk
- www.portablestage.co.uk

Lightest, Fastest and lasts Longest!
Call us now

0845 2260 192