

NexGen Portable Staging

USER GUIDE





We've **designed** a next **generation** staging deck and riser to make life a lot easier for our clients.

NexGen Platinum Portable Staging is not just the fastest and easiest staging system to set up and take down. It also raises your performance by boosting cognitive skills, such as creativity, problem-solving, memory, and concentration. How does it do that? By using cutting-edge technology and materials that are: • Fully Magnetic – no locks or keys required, which means less hassle and more security. • Light but Strong Platforms – only 7.2 kg each, which means less strain and more stability. • ECO Friendly Sustainable materials – which means less waste and more responsibility. We manufacture our products in the UK

Nathan Griffn, Director

CONTENT

	Assembly	2
	Opening the Riser Legs	2
	Placing the deck platforms on the risers	2
	Placing the brace plate connectors	2
	Fitting the Fascia Hardboards	2
	Attaching a step or lower level platform module	3
	Using a Disabled access wheelchair ramp	3
	Handrail & Clamp Assembly	4
	Adding Chair stop & Uneven Floor Wedges	4
>	Takedown the deck platforms	5
>	Taking down all other items	6
	Storage	6
>	Parts	7
>	Tins	c

ASSEMBLY





➤ OPENING THE RISER LEGS

Open the riser legs out whilst touching the foor, to avoid stressing the poles and rods. Slowly open and tap down on the floor. Do not open out in the air.



➤ PLACING THE DECK PLATFORMS ON THE RISERS

Place the deck platforms onto the location pillars, so that all 4 pillars are seated into the deck holes. The magnetic force will attract the decks together, tap the decks into place where required.



➤ PLACING THE BRACE PLATE CONNECTORS

Place the brace plates on each of the connection point. Place over the location pillars around the perimeter joins and internal joins.




➤ FITTING THE FASCIA HARDBOARDS

Place the fascia boards into position, start with the corner sections, so you can align the corner properly

ASSEMBLY






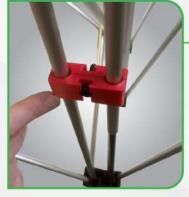

ATTACHING A STEP OR LOWER LEVEL PLATFORM MODULE

Adding a step at a lower level, or a lower tier section requires fixing the legs of the risers together. Use the straps provided to Velcro around the silver riser leg poles. This will secure the step to the higher stage.

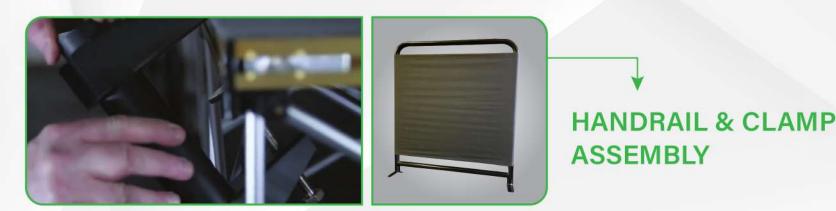

Each handrail requires 2 clamps. Undo the large brass circle screw past the half way point in the clamp, then twist the clamp under the deck missing the riser poles. Undo the black tube screw, so the base tubes of the handrail can be fully slipped into the clamp tubes. Then tighten the screws, both under the deck and to fix the handrail in the tube. Repeat for all rails, including the dual corner areas.

ASSEMBLY









USING A DISABLED ACCESS
WHEELCHAIR RAMP

The ramp is very fast to assemble and sits without any need for fxings. Simply assemble the ramp and place on the foor and the lip of the staging. The grip underside stops movement in use. (You may need multiple ramps to achieve the incline rements of your wheelchair users)

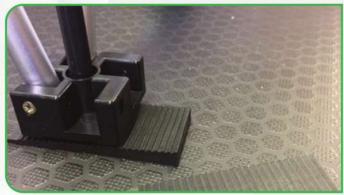

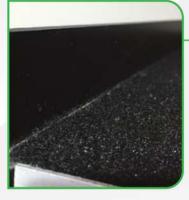

ADDING CHAIR STOP & UNEVEN FLOOR WEDGES


Add in the same manner as the fascia hardboards. The chair stop boards stand proud of the stage. Adding uneven floor wedges under the riser legs, black block feet can stop unwanted bounce on slightly uneven floors.


TAKEDOWN



IMPORTANT

(When removing the deck platforms from the riser legs, they must be lifted vertically.) Lifting at an angle will stress and snap the location pillars on the riser, as they are still magnetically attracted to the deck. Hold down the riser legs to break the magnetic force, and ofset the deck platform. Then repeat the process at the other end of the deck and then lift the deck vertically clear. Two people can do this easier.

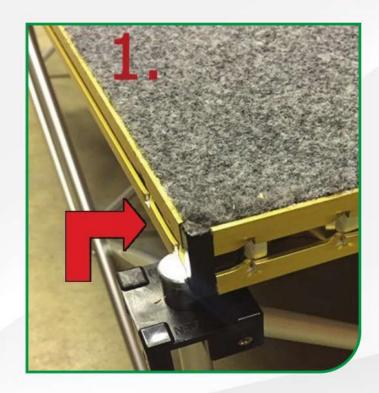

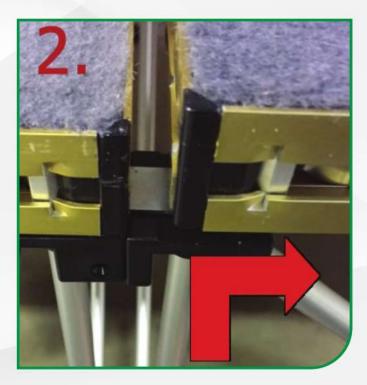

TAKING DOWN ALL OTHER ITEMS





Simply reverse the assembly instructions for take down of the Handrails, Fascia, Steps and Ramps.

STORAGE

The important point to note is that the riser legs are fragile when they are being taken down and left in their storage position. Do not lift the decks off the risers at an angle. Placing the risers on a trolley or in a fight case will keep them safe whilst in storage.

SIZE	20cm HIGH	KG	30cm HIGH	KG	40cm HIGH	KG	60cm HIGH	KG	
lm x lm NexGen	12x12x52.7	2	12x12x57.2	2	12x12x63	2	12x12x77.2	3	
1m x 0.52m NexGen	12x8x52.7	1	12x8x57.2	1	12x8x63	1	12x8x77.2	1	

VIDEO GUIDE

Visit our video gallery to see how fast, and easy it is to assemble NexGen staging.

You can also visit our youtube channel for more in-depth video tutorial about setting up and taking down the staging.







https://www.youtube.com/channel/UCHeQ91I5-S7ZsIwEAJWZE8w

PARTS



Identify the parts below, so you can replace where required to keep your staging in tip top condition. Available online to order.



GUIDE TUBE 300MM TO 1000MM RISERS



GUIDE TUBE 200MM RISERS ONLY




VERTICAL TUBE ALL SIZES




LOCATION PILLARS



GOLD TURBO SCREWS

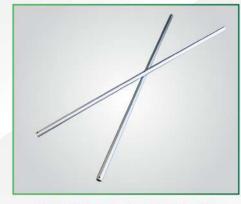

SCISSOR SECTIONS

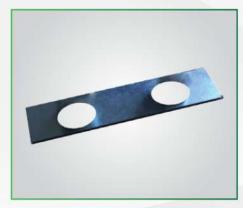

BRACE CONNECTORS



HARDBOARD FASCIA FASTENERS

PARTS



Identify the parts below, so you can replace where required to keep your staging in tip top condition. Available online to order.



UNEVEN FLOOR WEDGES



BLACK BLOCKS



HANDRAIL CLAMPS



TROLLEY



VELCRO STEP/TIER STRAPS



FLIGHT CASE



BLACKDROP 6M X 3M



TIPS

- > Store Risers Safely so they cannot be bent or broken whilst in storage.
- Always lift decks vertically so location pillars are not sheared from the risers.
- > Don't store staging in extremes Radiators & Cold Stores will shorten the lifespan of your staging.
- Housekeep the risers tighten screws and straighten guide tubes occasionally.
- Store your handrails on the wall Fit 2 brackets to a wall and hang the handrails from them to save space.
- Rain & Water warps wood If left out in the rain the deck platforms will warp.
- Use a Flight Case Store items on a trolley or if your budget allows in a Flight Case.
- > Parts keep your staging useable Order inexpensive parts for legs on the www.portablestage.co.uk website.



Riser Child Child Carbet Color Stage Wise Stage House Stage Housest Stage Lifespan Stage Lifespan

UK Manufactured Portable Staging

NexGen Staging Limited, SolPro Estate, Unit 12, Royds Mills, Windsor Street, Sheffield S4 7WB

- 0114 399 2978
- enquiries@portablestage.co.uk
- www.portablestage.co.uk



Lightest, Fastest and lasts Longest!

Call us now 0114 399 2978